

Installation:

- 1. Insert the non-adhesive end of the heel grounder inside the shoe so that the black dot is in the center of the heel area.
- 2. Wrap the heel grounder around the back (or side) of shoe so that the adhesive can be adhered to the bottom of the heel.
- 3. Remove perforated section by lifting the paper backing from the middle as shown.
- 4. Press adhesive part of the foot grounder to the heel of the shoe. Do not allow adhesive to come in contact with any part of the shoe except for the heel. The adhesive may leave a residue.
- 5. Step in to shoe. Disposable heel grounder is to be installed on both shoes and used with ESD flooring.
- 6. Test each worn foot grounder with a Personal Grounding Tester

Specifications	Typical Value
Size	1/2" W x 12" & 24" L
Resistance to Ground (Rtg)	≥ 5 x 10 ⁴ < 8 x 10 ⁵ ohms

Item	Description	Length	Package
<u>5402</u>	Disposable Heel Grounder	12"	100 per bag
<u>5403</u>	Disposable Heel Grounder	24"	100 per bag

Unless otherwise noted, tolerance ± 10% Specifications and procedures subject to change without notice.	DISPOSABLE HEEL GROUNDER		
SCS	926 JR Industrial Drive, Sanford, NC 27332	DRAWING	DATE
	WEB SITE: <u>StaticControl.com</u>	NUMBER	April
	PHONE (919) 718-0000	5402	2024

© 2024 DESCO INDUSTRIES INC Employee Owned

Bottom Heel of Shoe

> Remove perforated section here and begin peeling towards the left